


CABLE BUNDLE ORGANIZING TOOL INSTRUCTIONS

© Panduit Corp. 2007

The following steps are used for bundling cables starting from the middle of the bundle outwards using two tools. For starting at the end of the bundle follow the same steps using only one tool.

STEP 1: Select the appropriate insert from the table below. Join two same color inserts together using the pocket and boss alignment features. Hold the two inserts together before inserting cables.

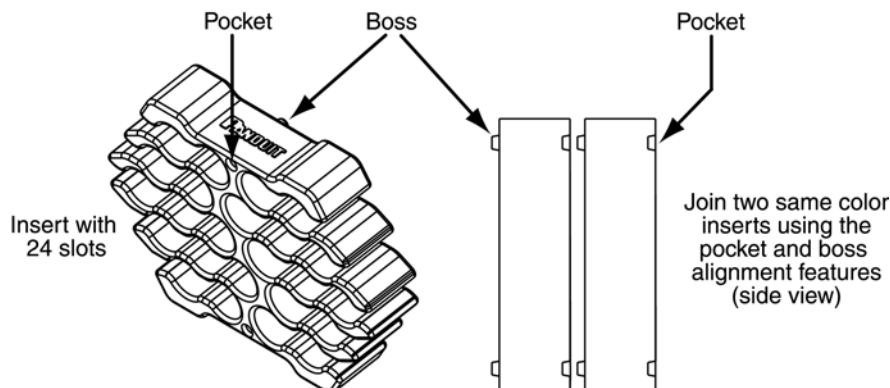


INSERT INFORMATION

Insert Color	Recommended for Cable Outer Diameter Range	Insert Used with the Following <i>PANDUIT</i> Cable Types
Fluorescent Green	0.180" - 0.248" 4.57mm - 6.30mm	<i>TX5500</i> ™ Category 5e UTP <i>TX6000</i> ™ Category 6 UTP
Fluorescent Yellow	0.230" - 0.310" 5.84mm - 7.87mm	<i>TX6500</i> ™ Enhanced Category 6 <i>TX6A</i> ™ 10Gig™ Category 6A** All Shielded Cables


** When using the CBOT24K on 10 Gigabit cables, it is recommended that *PANDUIT* 10Gig™ Category 6A cables be used for optimum performance of installed cable.

STEP 2: Insert cables, one at a time, into the two inserts while holding them together.

STEP 3: Once all cables are installed, the inserts can be separated by pulling them apart. Make sure that no cables fall out of the inserts during this step.

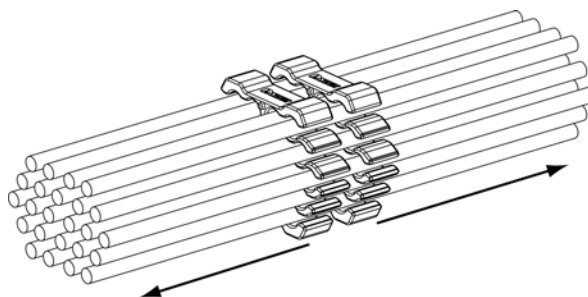

STEP 4: After the inserts are separated, install the hinged jacket around each insert and secure with the attached hook and loop fastener to secure the assembly. Each of the tools can now be guided in either direction to organize cables. Apply cable ties at desired intervals as you move along the cable bundle length.

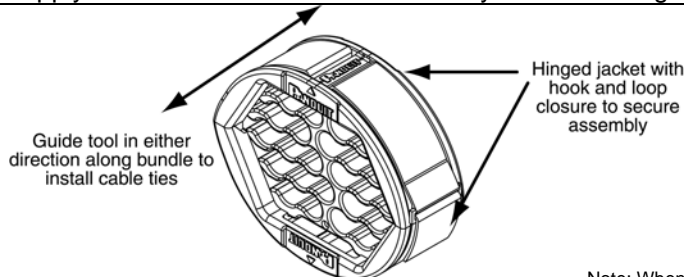

Note: When complete slide reusable tool off of cable bundle